

TABLE SAW MAINTENANCE GUIDE

- ADJUST THE MITER FENCE
- ADJUST HEIGHT AND ANGLE OF SLIDING MITER TABLE
- REDUCE PLAY ON THROAT PLATE
- CHECK THAT THE RIVING KNIFE IS OPERATING PROPERLY
- ADJUST THE BLADE GUARD
- INSPECT THE BEVEL SCALE
- ENSURE THE SWITCH IS WORKING
- CLEAN THE SAW BLADE
- ADJUST THE MITER BOX